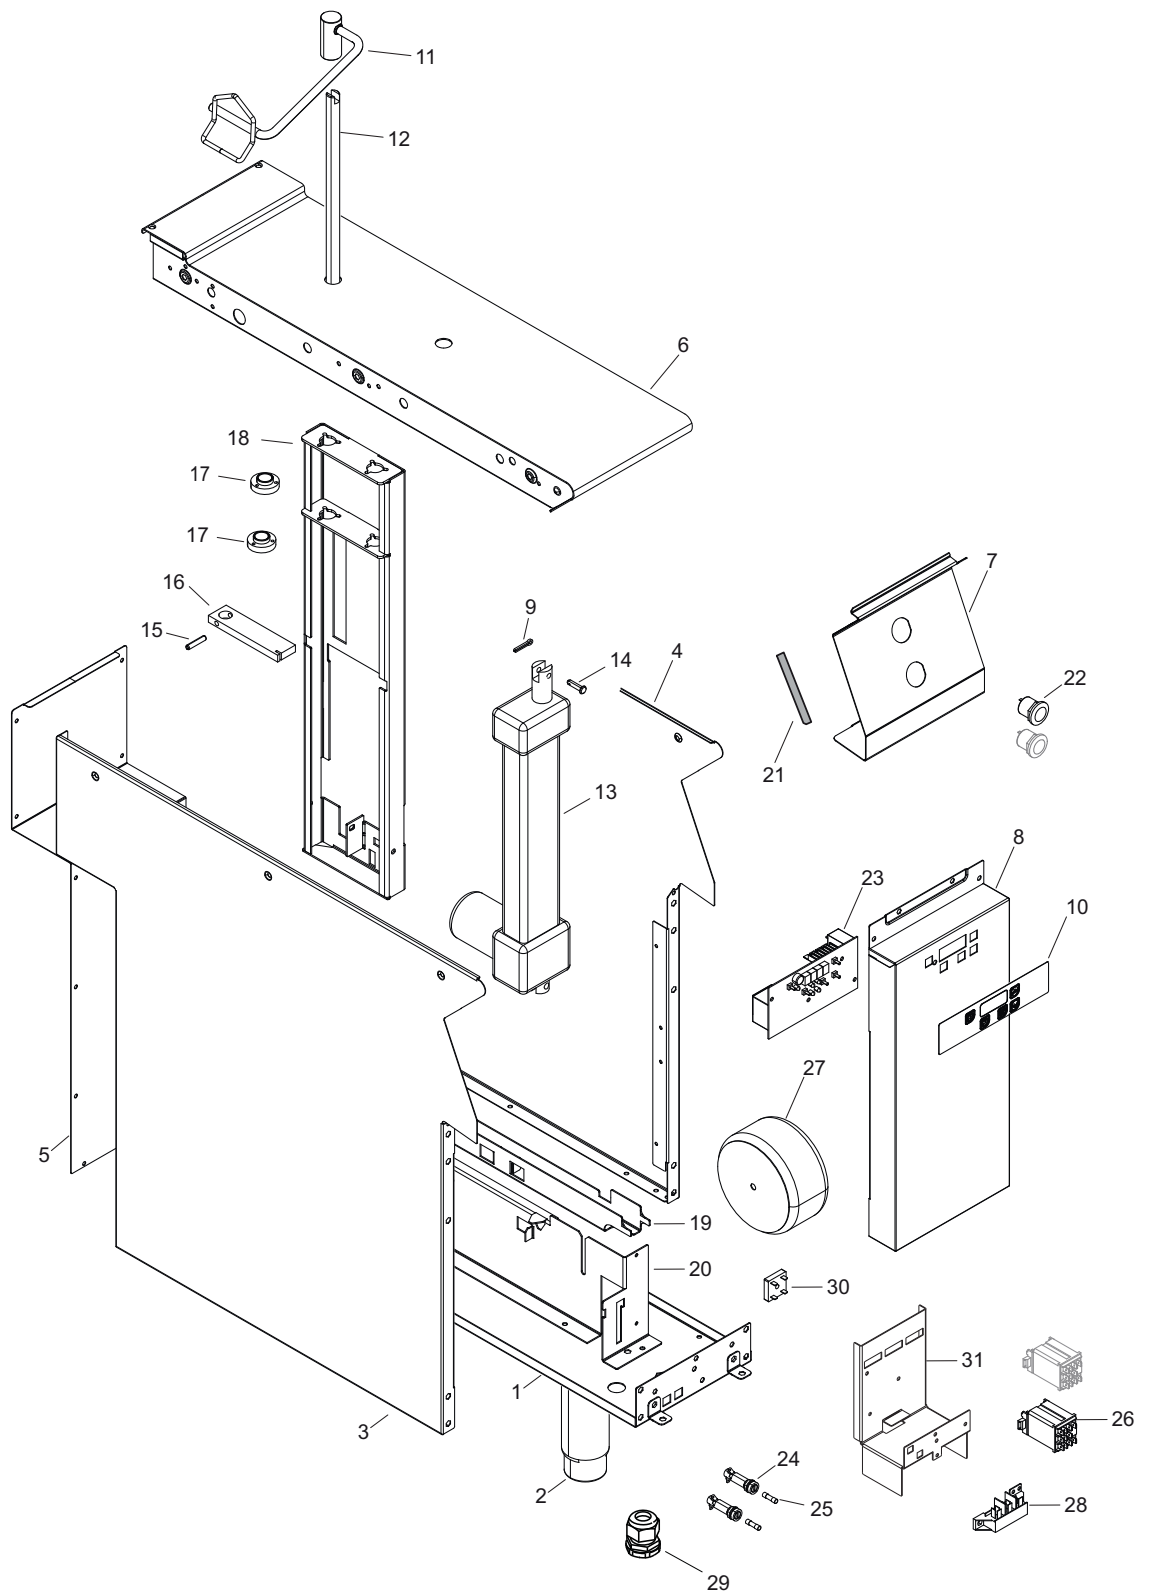


SPARE PARTS CATALOGUE
 CATALOGO PARTI DI RICAMBIO
ACCESSORIO SOLLEVAMENTO E700XP / E900XP
LIFTING SYSTEM E700XP / E900XP

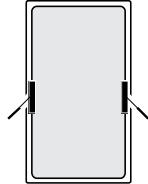

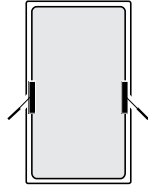

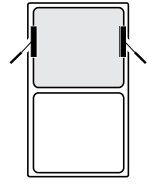

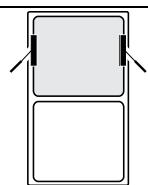

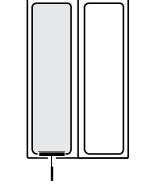

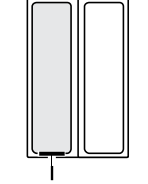

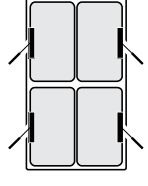

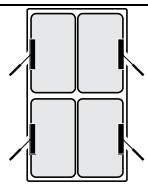

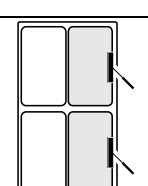

PNC	Model	Ref	Brand	Notes
206352	LIFE7	a	ELX	200MM PASTA COOKER E700
206354	LIFZ7	b	ZAN/OEM	200MM PASTA COOKER E700
206353	LIFE9	c	ELX	200MM PASTA COOKER E900
206355	LIFZ9	d	ZAN/OEM	200MM PASTA COOKER E900

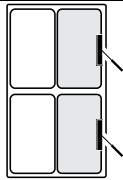

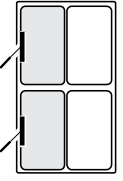

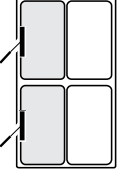

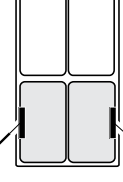

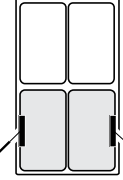









Pag	Index	Indice	Note
2	Components	Componenti	
3	Spare parts list	Lista ricambi	
4	Baskets 700	Cestelli 700	



ACCESSORIO SOLLEVAMENTO E700XP / E900XP
LIFTING SYSTEM E700XP / E900XP

<i>Pos</i>	<i>Factory Code</i>	<i>Spare Code</i>	<i>Descrizione</i>	<i>Description</i>	<i>Ref./Note</i>
1	050489HS02	*	FONDO	BOTTON PANEL	E900
1	050489J202	*	FONDO	BOTTON PANEL	E700
2	0835856900	0C0204	PIEDE	FOOT	
3	050389HJ00	0CB153	FIANCO DESTRO	RIGHT PANEL	E900 ELX
3	050389HL00	0CB154	FIANCO DESTRO	RIGHT PANEL	E900 ZAN/OEM
3	085089L500	*	FIANCO DESTRO	RIGHT PANEL	E700 ELX
3	085089L700	*	FIANCO DESTRO	RIGHT PANEL	E700 ZAN/OEM
4	050389HH00	0CB151	FIANCO SINISTRO	LEFT PANEL	E900 ELX
4	050389HK00	0CB152	FIANCO SINISTRO	LEFT PANEL	E900 ZAN/OEM
4	085089L400	*	FIANCO SINISTRO	LEFT PANEL	E700 ELX
4	085089L600	*	FIANCO SINISTRO	LEFT PANEL	E700 ZAN/OEM
5	050389UD01	*	SCHIENALE	BACK PANEL	
6	0870895601	0C7150	RIPIANO	TABLE TOP	E900 ELX
6	087089MQ00	0C7233	RIPIANO	TABLE TOP	E900 ZAN/OEM
6	087089CK01	0C7219	RIPIANO	TABLE TOP	E700 ELX
6	087089MR00	0C7184	RIPIANO	TABLE TOP	E700 ZAN/OEM
7	050389HN01	0C7365	CRUSCOTTO	CONTROL PANEL	E900 ELX
7	0553881S01	0C7186	CRUSCOTTO	CONTROL PANEL	E700 ELX
8	080589AG02	0C7367	PANNELLO FRONTALE	PANEL	
9	0219812A00	*	COPIGLIA	SPLIT PIN	
10	0548877000	0C7363	MEMBRANA	LAYER	
11	083089F102	0C8554	SUPPORTO CESTELLO	BASKET SUPPORT	E900
11	083089F802	0C7197	SUPPORTO CESTELLO	BASKET SUPPORT	E700 up to 1441
11	083089F803	0C8555	SUPPORTO CESTELLO	BASKET SUPPORT	E700 from 1451 up to 8051
11	083089F804	*	SUPPORTO CESTELLO	BASKET SUPPORT	E700 from 8061
12	0516899D00	0C7359	ASTA	SHAFT	
13	0611808604	0C4721	ATTUATORE	ACCOMPLISHER	
14	0219812801	*	PERNO DI FISSAGGIO	FIXING PIN	
15	0219704305	*	SPINA ELASTICA	FIXING PIN	
16	0511833300	0C5575	ANTIROTAZIONE	ANTI-ROTATION	
17	0511833202	0C5576	BOCCOLA	BUSH	
18	083089DH01	0C7195	SUPPORTO ATTUATORE	ACCOMPLISHER SUPPORT	
19	050489J401	*	SUPPORTO	SUPPORT	2 Motors
19	050489DR01	*	SUPPORTO	SUPPORT	3 Motors
20	050489J301	*	SUPPORTO	SUPPORT	2 Motors
20	050489DP02	*	SUPPORTO	SUPPORT	3 Motors
21	0543821900	0C2496	GUARNIZIONE CRUSCOTTO	GASKET	
22	0640804A00	0C7357	PULSANTE	PUSH BUTTON	
23	0675860F00	0C7361	SCHEDA ELETTRONICA	MAIN BOARD	
24	0652800401	056582	PORTA FUSIBILI	FUSE HOLDER	
25	0652805200	*	FUSIBILE 1,6 A 5X20	FUSE 1,6 A 5X20	5X20
26	0648806900	006610	RELÈ	RELAY	
27	0624805601	006159	TRASFORMATORE	TRASFORMER	
28	0639804900	046357	MORSETTIERA	TERMINAL BOARD	
29	0544802200	0C2328	PRESSACAVO	TOGHTENER CORD	
30	0675830800	006147	RADDRIZZATORE		
31	050489K000		SUPPORTO COMP. ELETTRICI	ELECTRIC COMPONENTS SUPPORT	
	0830857105	0C1340	CESTELLO PASTA	PASTA BASKET	E900 275X150

CODE	DESCRIPTION	DIMENSION			NOTES
004874 877894401	Basket AISI 304 for pastacooker PNC 921611	L = 220 mm P = 350 mm A = 265 mm			Up to 2017/49
004874 877894403	Basket AISI 304 for pastacooker PNC 921611	L = 220 mm P = 350 mm A = 240 mm			From 2017/50
004875 830817802	Basket AISI 304 for pastacooker PNC 921610	L = 220 mm P = 170 mm A = 265 mm			Up to 2017/49
004875 830817804	Basket AISI 304 for pastacooker PNC 921610	L = 220 mm P = 170 mm A = 240 mm			From 2017/50
004873 830818001	Lengthwise basket AISI 304 for pastacooker PNC 921619	L = 105 mm P = 350 mm A = 265 mm			Up to 2017/49
004873 830818002	Lengthwise basket AISI 304 for pastacooker PNC 921619	L = 105 mm P = 350 mm A = 240 mm			From 2017/50
2x OCA258 (2 x 0C9226+ 2 x 0C9227)	Kit, 4 square baskets, AISI 304 for pastacooker (need to work on top code 004876)	L = 105 mm P = 160 mm A = 265 mm			Up to 2017/49
2x 0CB360 (2x 83089NL00 + 2x 83089NK00)	Kit, 4 square baskets, AISI 304 for pastacooker (need to work on top code 004876)	L = 105 mm P = 160 mm A = 240 mm			From 2017/50
2x 0C9226 2x 83089JG02	Kit, 2 RIGHT square baskets, AISI304 for pastacooker (need to work on top code 004876)	L = 105 mm P = 160 mm A = 265 mm			Up to 2017/49

CODE	DESCRIPTION	DIMENSION			NOTES
2x 83089NL00	Kit, 2 RIGHT square baskets, AISI 304 for pastacooker (need to work on top code OCB362)	L = 105 mm P = 160 mm A = 240 mm			From 2017/50
2x OC9227 2x 830821103	Kit, 2 LEFT square baskets, AISI 304 for pastacooker (need to work on top code 004876)	L = 105 mm P = 160 mm A = 265 mm			Up to 2017/49
2x 83089NK00	Kit, 2 LEFT square baskets, AISI 304 for pastacooker (need to work on top code OCB362)	L = 105 mm P = 160 mm A = 240 mm			From 2017/50
OCA258 9F92101800 (87589FC00)	Kit, 2 square baskets (left & right) AISI 304 for pastacooker (need to work on top code 004876)	L = 105 mm P = 160 mm A = 265 mm			Up to 2017/49
OCB360 87589G500 (83089NL00 + 83089NK00)	Kit, 2 square baskets (left & right) AISI 304 for pastacooker (need to work on top code OCB362)	L = 105 mm P = 160 mm A = 240 mm			From 2017/50
006886 830892902 206312	Single portion basket, AISI 304 for electronic automatic pastacookers	L = 100 mm P = 165 mm A = 123 mm			
OC9539 87889BJ02 206314	Lengthwise basket, AISI 304 for electronic automatic pastacookers	L = 105 mm P = 350 mm A = 123 mm			
004876 877894800	False bottom, AISI 304 for pastacooker	L = 230 mm P = 350 mm A = 30 mm			Up to 2017/49
OCB362 87889FR00	False bottom, AISI 304 for pastacooker	L = 230 mm P = 350 mm A = 60 mm			From 2017/50